


OUTSWING CLAD INSTALLATION INSTRUCTIONS

- STEP 1:** Apply 1/16" rubber shim on dado. (Trim to length if 4-9/16)
- STEP 2:** Assemble jamb verticals and head only.
- STEP 3:** Slide outswing header clad over jamb.
- STEP 4:** Slide nail fin into header kerf.
- STEP 5:** Slide outswing clad over jamb verticals.
- STEP 6:** Line up clad over hinge and latch cutouts.
- STEP 7:** Fasten clad through short leg on back of jamb with brad nailer or screws.
- STEP 8:** Screw outswing clad corners together using miter screws. (Included)
- STEP 9:** Apply nail fin to kerf on verticals and install sill. Cladding will be the shim between sides and sill.

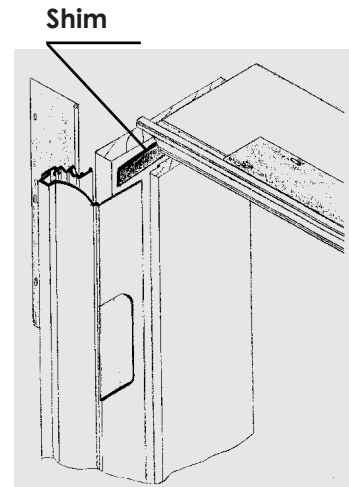


www.frontlinebldg.com | sales@frontlinebldg.com | 920-393-1340

©2020 FrontLine Bldg. Products Inc.

SC/0C/II1000/0720IH

OUTSWING CLAD INSTALLATION INSTRUCTIONS

- STEP 1:** Apply 1/16" rubber shim on dado. (Trim to length if 4-9/16)
- STEP 2:** Assemble jamb verticals and head only.
- STEP 3:** Slide outswing header clad over jamb.
- STEP 4:** Slide nail fin into header kerf.
- STEP 5:** Slide outswing clad over jamb verticals.
- STEP 6:** Line up clad over hinge and latch cutouts.
- STEP 7:** Fasten clad through short leg on back of jamb with brad nailer or screws.
- STEP 8:** Screw outswing clad corners together using miter screws. (Included)
- STEP 9:** Apply nail fin to kerf on verticals and install sill. Cladding will be the shim between sides and sill.

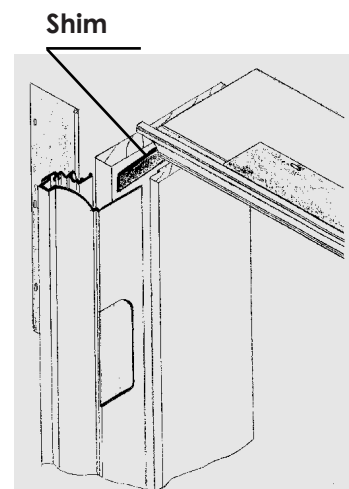

www.frontlinebldg.com | sales@frontlinebldg.com | 920-393-1340

©2020 FrontLine Bldg. Products Inc.

SC/0C/II1000/0720IH