

FLAT CASING INSTALLATION INSTRUCTIONS

STEP 1: Assemble and install your door per unit instructions. Make sure the miter screw has been installed and the Crownline corner joint is tight. (Figure 1)

Figure 1



STEP 3: If your flat casing was sent long, you will need to cut to size. Without snapping the casing into place, align the miter on one side with the miter of the crownline. Measure, mark and cut the other end to fit. This will be a miter cut on the header and straight cuts on the verticals. (Figure 3)

Figure 3




STEP 2: Find the two (2) Flat Casing corner brackets. (Figure 2)

Figure 2




STEP 4: Attach the corner bracket to the back of the Flat Casing as shown below (Figure 4). One bracket goes on each end of the header.

Figure 4

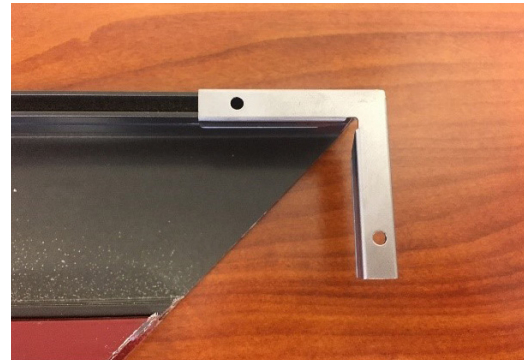

STEP 5: Snap the header flat casing on the crownline, aligning the miters. (Figure 5)

Figure 5

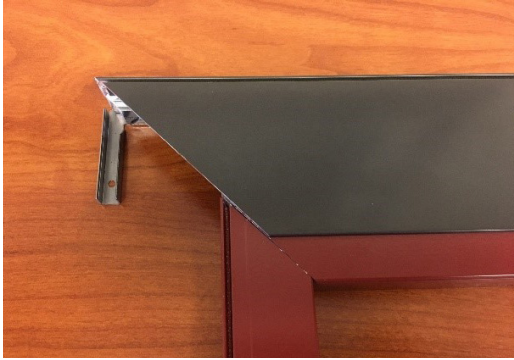

STEP 7: Using a rubber mallet, tap the vertical up into the bracket and into place against the header. (Figure 7)

Figure 7



STEP 6: Cut the flat casing vertical to size if you haven't already done so. (See Step 3) Snap on the vertical, leaving in slightly below the corner bracket if possible. If there is not enough room, snap into place and make sure the outside of the flat casing snaps into the bracket already attached to the header. (Figure 6)

Figure 6



STEP 8: The corner bracket will hold the miters in place and keep the verticals from sliding down. (Figure 8)

Figure 8



Caulk if Necessary. (Caulk Sold Separately)



www.frontlinebldg.com | sales@frontlinebldg.com | 920-393-1340