

FLTA-75 EXPANDER **INSTALLATION INSTRUCTIONS**

STEP 1: Apply D/C Poly Tape to the back of part FLTA-75 Expander. It is recommended to apply the tape close to the return leg on the expander. (Figure 1)


STEP 3: Attach the jamb cover to the wood jamb, overlap the expander and screw the jamb cover tight to the wood jamb. Make sure to compress the jamb cover tight to the face of the wood jamb for a tight fit.

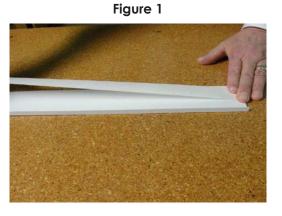

STEP 2: Apply the expander to the wood jamb, the return leg will go behind the weather seal. Hold the piece tight to the jamb for good adhesion of the tape. (Figure 2)

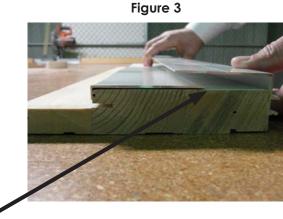

NOTE: DO NOT overlap the jamb cover more than 1/2" over the expander. If you need to overlap more than 1/2", rip down the expander. Overlapping more than 1/2" will cause the jamb cover to lift up and away from the expander. (Figure 3)

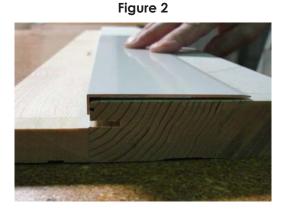

Bldg. Products Inc. Member of the Bay Family of Companies

www.frontlinebldg.com | sales@frontlinebldg.com | 920-393-1340

©2019 FrontLine Bldg. Products Inc.

SC/FLTA75/II/0819PTP