


# PRE-CLADD PATIO DOOR FRAME SCREEN-ANTI RATTLE GUIDE INSTALL INSTRUCTIONS

- STEP 1:** Locate the top of the screen frame before screen is installed.
- STEP 2:** Locate the channel on top of the screen frame.
- STEP 3:** Snap Anti-Rattle Guide into the top channel of the screen by firmly pushing the Guide into the channel as shown.

Anti Rattle Guide (Side View)

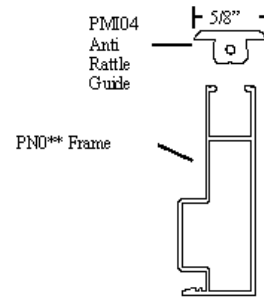

[www.frontlinebldg.com](http://www.frontlinebldg.com) | [sales@frontlinebldg.com](mailto:sales@frontlinebldg.com) | 920-393-1340


©2019 FrontLine Bldg. Products Inc.

SC/PCPDFSARG/II/0419PTP

# PRE-CLADD PATIO DOOR FRAME SCREEN-ANTI RATTLE GUIDE INSTALL INSTRUCTIONS

- STEP 1:** Locate the top of the screen frame before screen is installed.
- STEP 2:** Locate the channel on top of the screen frame.
- STEP 3:** Snap Anti-Rattle Guide into the top channel of the screen by firmly pushing the Guide into the channel as shown.

Anti Rattle Guide (Side View)

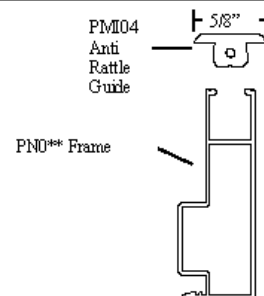

[www.frontlinebldg.com](http://www.frontlinebldg.com) | [sales@frontlinebldg.com](mailto:sales@frontlinebldg.com) | 920-393-1340

©2019 FrontLine Bldg. Products Inc.

SC/PCPDFSARG/II/0419PTP