

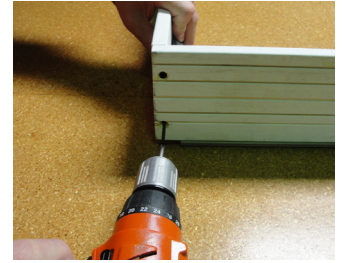
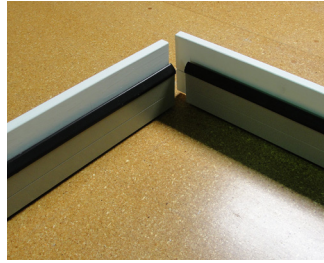


PRE-CLAD ENTRY DOOR FRAME INSTALLATION INSTRUCTIONS


STEP 1: Attach the two vertical jamb to the header using either screws or staples.

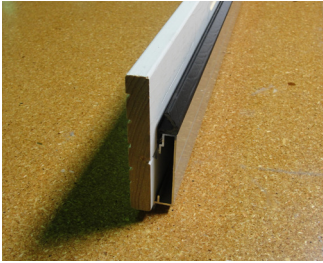

STEP 2: Attach the sill to the vertical jamb using screws or staples.

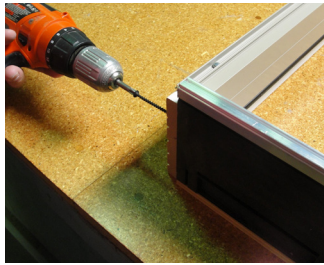

STEP 3: Caulk the seam at the header and along the sill.

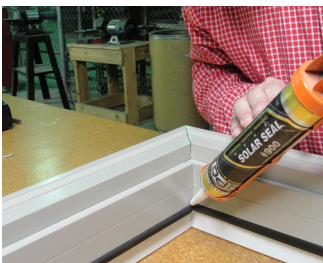

www.frontlinebldg.com | sales@frontlinebldg.com | 920-393-1340